





Tobii 4C with V4 Station Eye Tracker Calibration Instructions



- 1- Plug in eye tracker. On bottom right side of Windows task bar, click up arrow to select Tobii app icon - looks like an exclamation point and two dots.

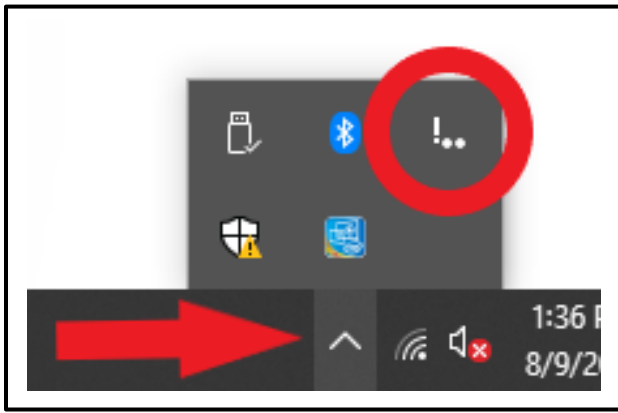

- 2- Click on "Click to set up your display"

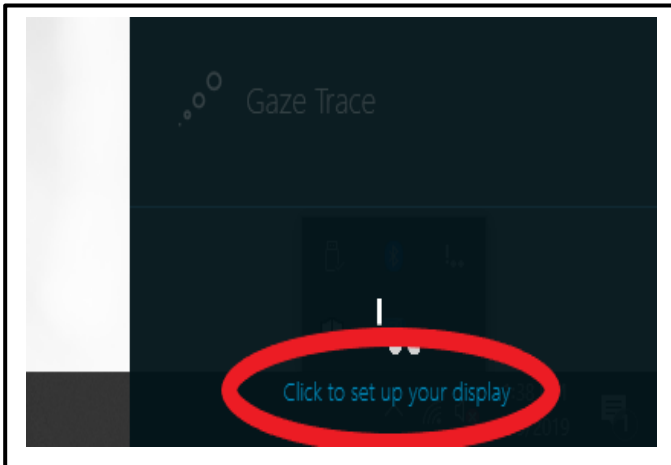


- 3- Snap eye tracker onto pre-installed magnet at the bottom of monitor, making sure to align the arrows onscreen with the lines on the top of the eye tracker.

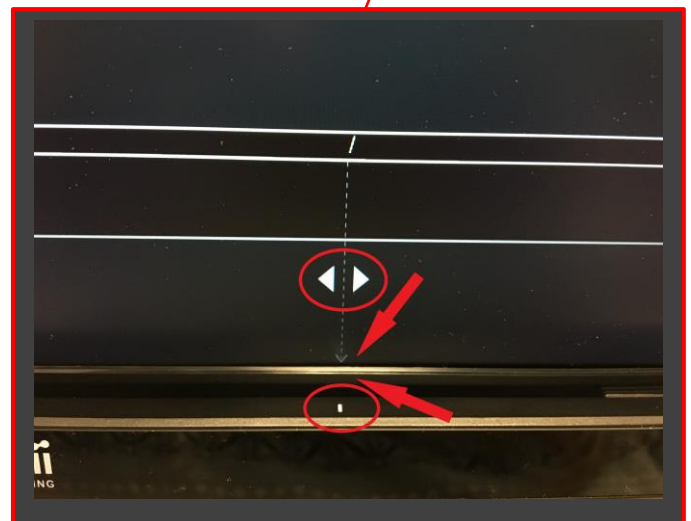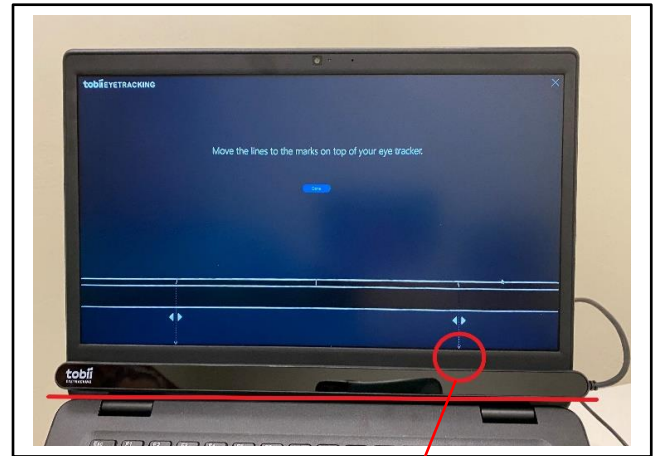





- 4- Click small arrow at bottom left, next to blue text: "Click here to change your user profile or improve calibration for the display"

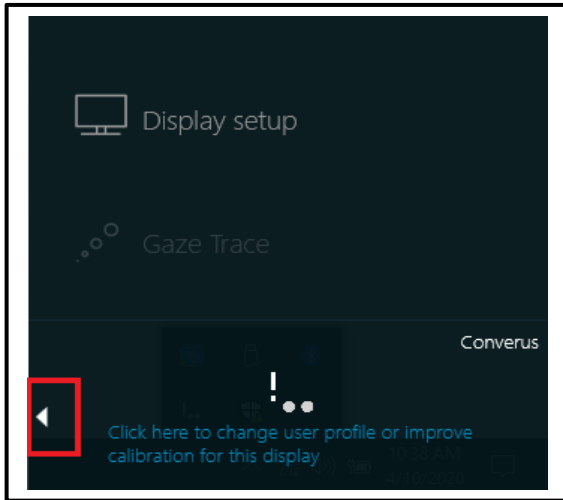

- 5- In next window to appear, select "Converus Calibrate" on left side.

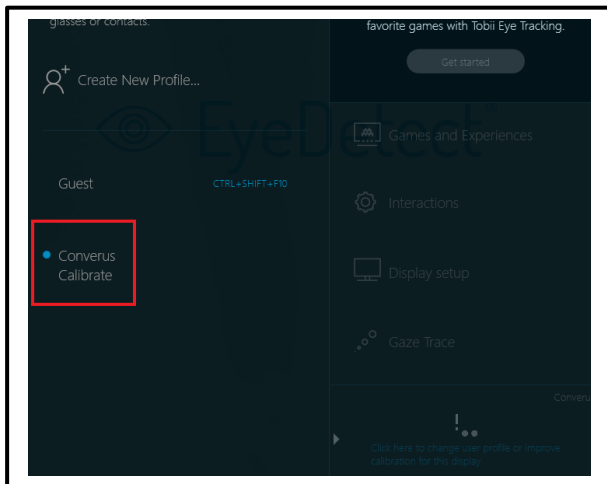

- 6- Follow calibration instructions as they appear onscreen, looking at dots until they explode.

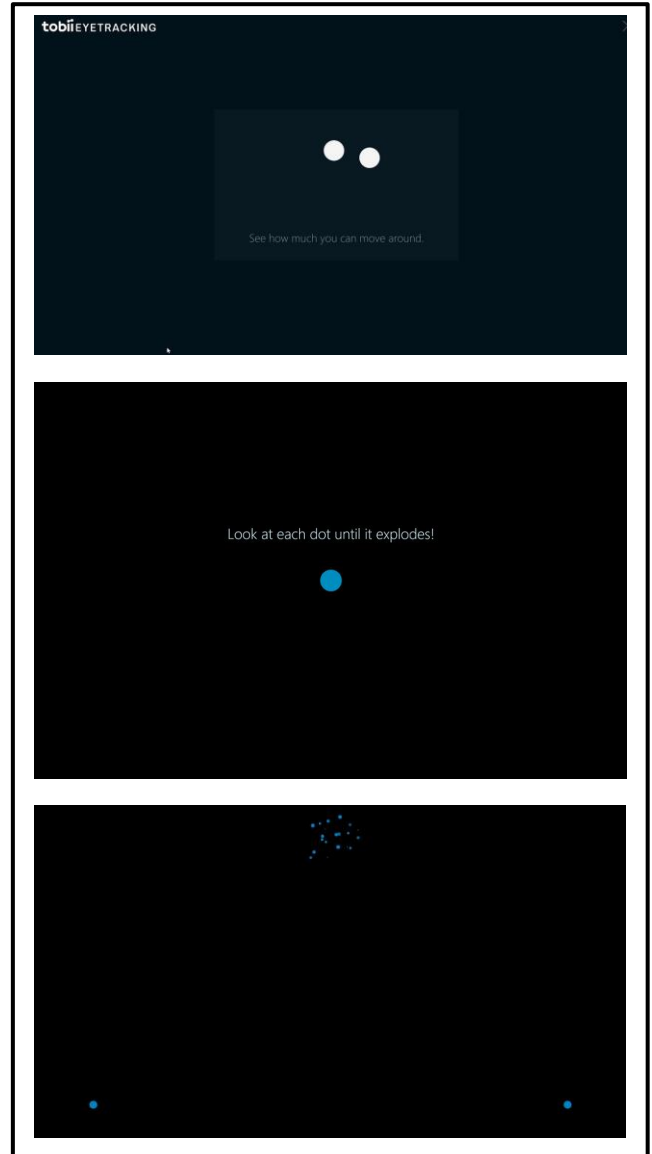

- 7- Press DONE when complete.

- 8- The Eye Tracker will now operate with the station.