





Tobii 5L Eye Tracker Calibration Instructions

- 1- Plug in eye tracker and snap to preinstalled magnet at bottom of screen. Open Tobii 5L Application (located in C:>Program Files>Tobii5L).

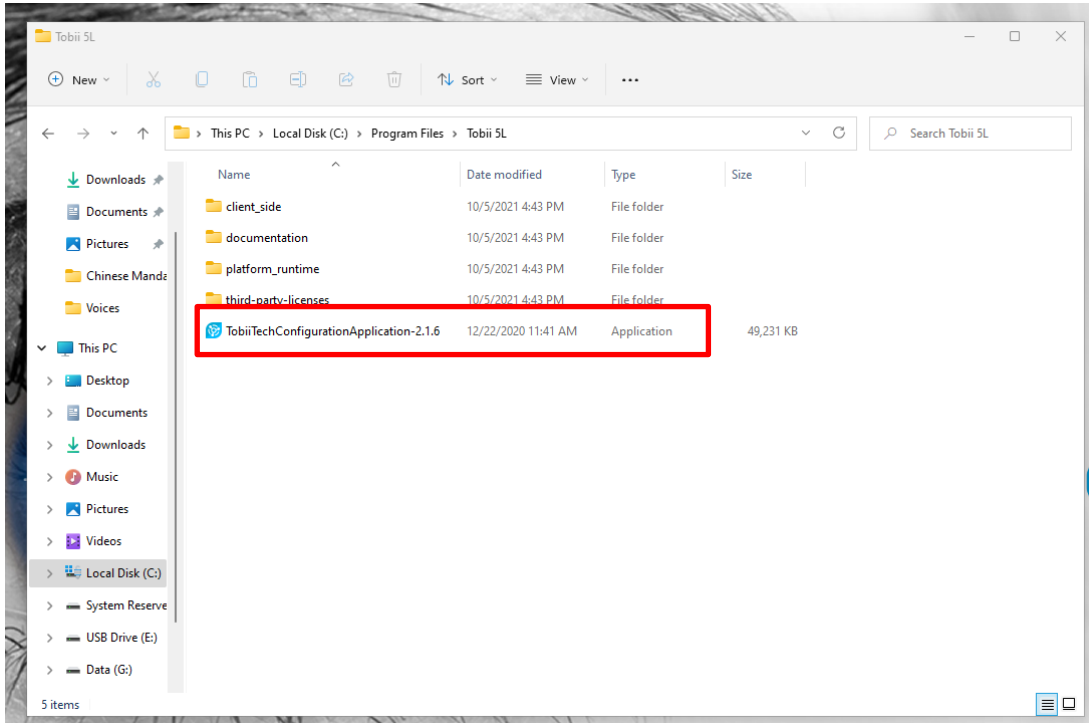


- 2- Select your Eye Tracker- Top left corner SN should match SN on back of Eye Tracker.

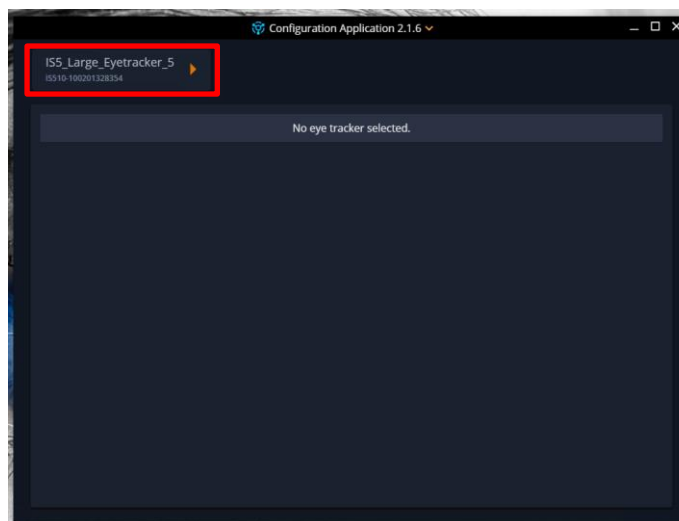




- 3- Make sure “Converus” is selected on DISPLAY SETUP. If not, click on drop down and choose “Converus”.

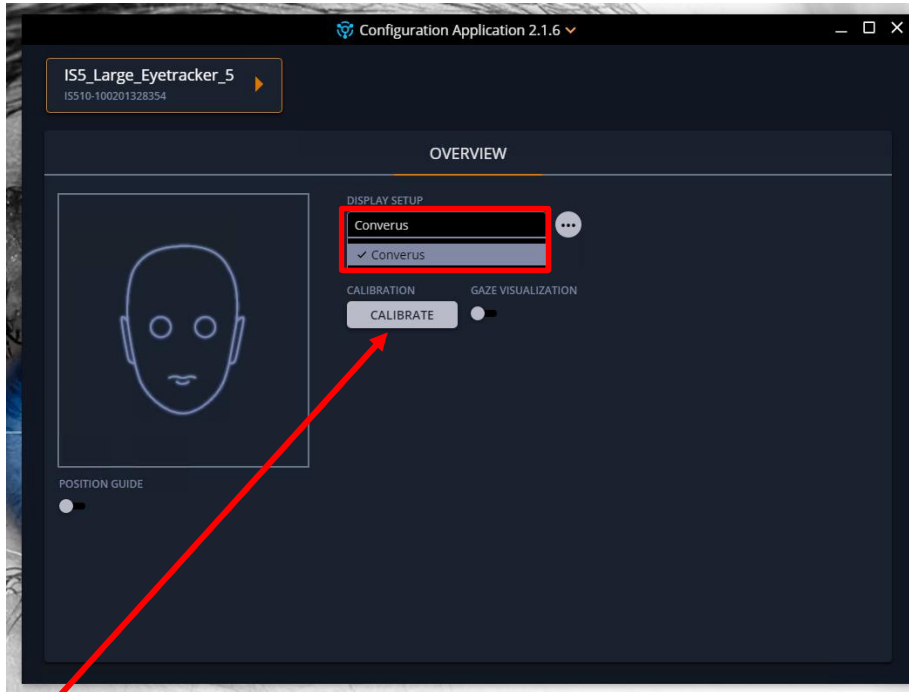


- 4- Click on CALIBRATE.
- 5- Follow onscreen instructions to position your head until it is green.

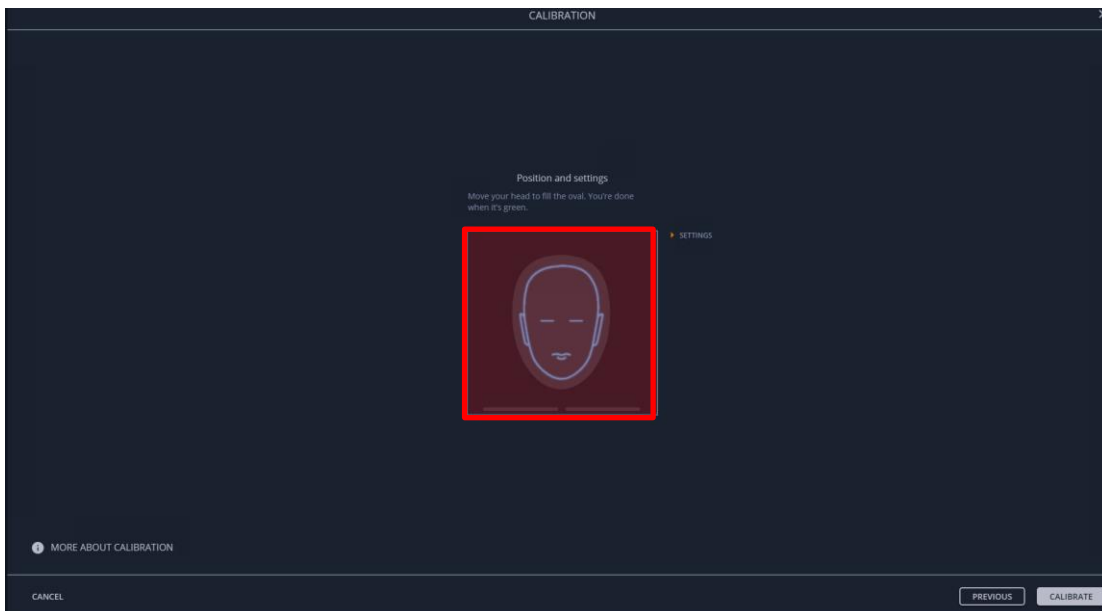




6- Once your head is green, select CALIBRATE on bottom right of screen.

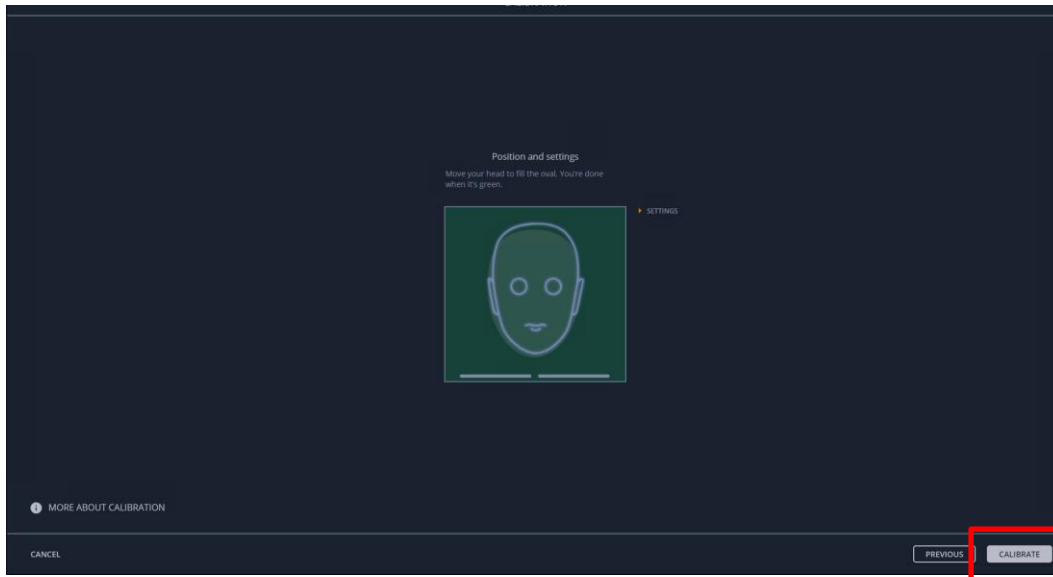

7- Follow the onscreen instructions, looking at the dots until they explode. Once complete this screen will appear:

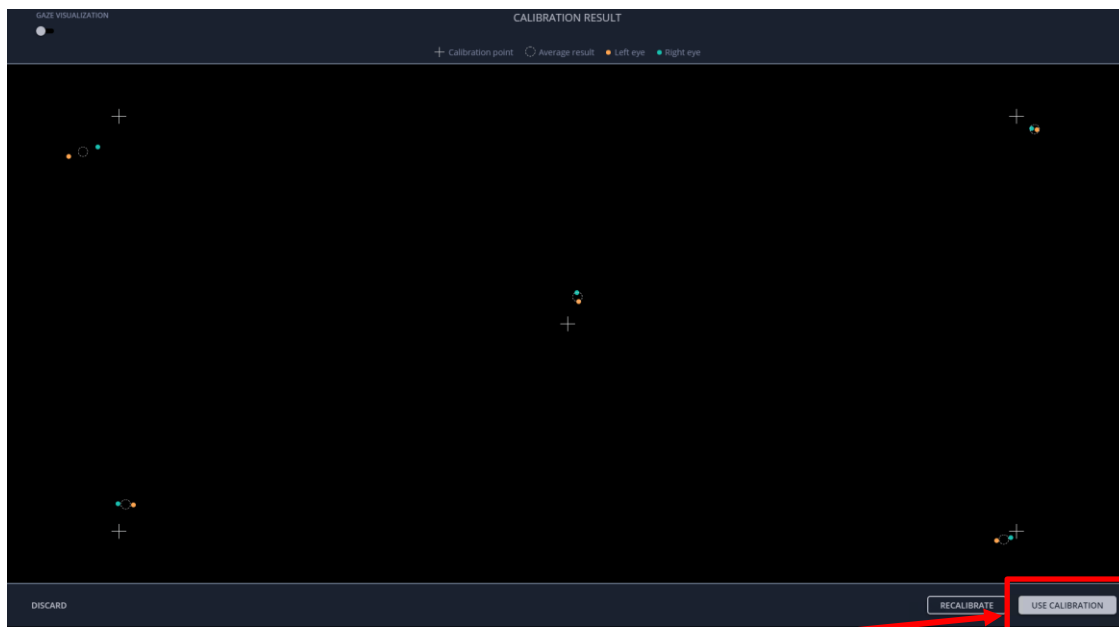

8- Click USE CALIBRATION.

9- Exit out of Tobii Application and open EyeDetect.

10- Sync the station. Now your new Tobii 5L Eye Tracker is ready.